TERRICCIO FREESTANDING BATHTUB

BB5578

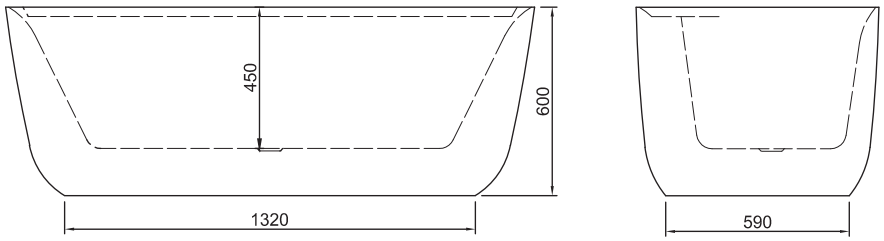

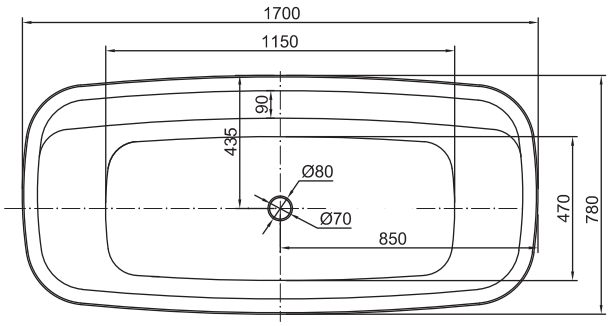

Dimensions are nominal measurements only

SPECIFICATIONS	
Recommended use	Domestic, hotel and commercial
Material	Cast Acrylic (PMMA)
Colour	Matt White
Weight	51 kg
Capacity	210 Litres
Overflow	No
Taphole availability	No Taphole. Tapware should be floor or wall mounted
Plug and Waste	Suits 40mm Non Overflow Waste
Fixing	Silicone to Floor

To see the complete BelBagno range go to www.belbagno.com.au/bathtubs/

CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners.

This product should not be cleaned with abrasive materials.

Damage caused by any improper treatment is not covered by the product warranty. Refer to Warranty Conditions.

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.
Tech Page Version 1

BelBagno

TERRICCIO FREESTANDING BATHTUB

INSTALLATION INSTRUCTIONS

Note: Please check the surface thoroughly before installing. Installation of bath will be taken as acceptance of product.

It is important to install the product in accordance with the installation instructions below.

This installation guide does not include details of waste connection; final decision about installation of waste connection should be taken by a suitably qualified person in accordance with the plumbing code AS/NZS 3500.

1. Install waste pipe and trap - taking into consideration the waste postition of the bath. Make sure that the surface where the bathtub will be placed is perfectly flat, clean, free of any excess humidity and offers adequate support.

2. For installation where access is restricted eg slab floor, or second story floor, the use of a Plumbdinger waste connector is recommended (sell separately).

3. Fit selected waste to bath and ensure waste is siliconed around Base.

4. Inspect thoroughly for leaks.

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference

BelBagno